 


TELEFUNKEN

15.6" FULL HD SMART CALENDAR

TTEFAMCL

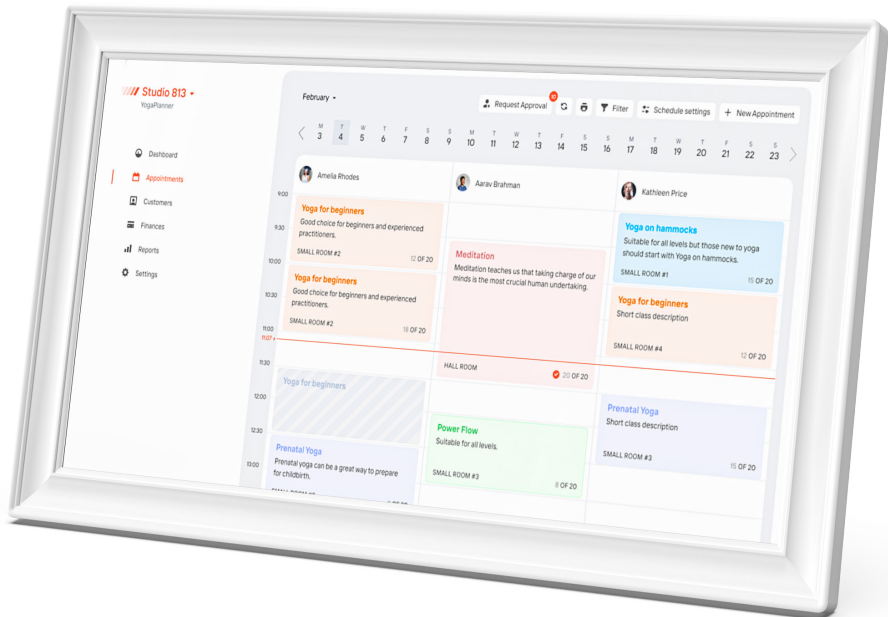

INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

General Safety	4
Product Overview	8
Dashboard	9
How to Sync External Calendar to your Account	10
Important Notes for Calendar Sync	11
Create Event	12
Create Tasks	14
Create Rewards	15
Add List	16
Meals	18
Photos	19
General Settings	21
Calendar Settings	22
Account Management	23
FAQ	25
Specifications	26
Customer Helpline	Last Page

GENERAL SAFETY

Read this manual thoroughly before you start using the Smart Calendar. Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

IMPORTANT INFORMATION

- Use cabinets or stands recommended by the manufacturer of the Smart Calendar.
- Only use furniture that can safely support the product.
- Ensure the product does not overhang the edge of the supporting furniture.
- Do not place the product on high furniture unless both the furniture and the product are secured to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children about the dangers of climbing on furniture to reach the Smart Calendar or its controls, and to ask an adult for assistance.

GENERAL SAFETY (CONT.)

IMPORTANT INFORMATION

- Do not expose this appliance to rain or moisture, as this may result in a fire or electric shock hazard.
- Do not tamper with, alter or modify the product in any way.
- Only use accessories specified and recommended by the manufacturer.
- Do not expose the product to splashing or contact with water.
- Do not place any objects on top of the product, including objects filled with liquid, such as vases.

INSTALLATION

Follow the instructions when installing this product, in accordance with the instruction manual. This product must be positioned in a sufficiently stable location. If it is positioned incorrectly, it may fall and cause injury, particularly to children.

- Do not plug several devices into the same power outlet. Doing so may cause the outlet to overheat and start a fire. Ensure the outlet is readily accessible during operation of the equipment.
- Do not cover the product's ventilation openings with items such as newspapers, tablecloths or curtains, and do not insert objects into the slots on the product. This may cause the product to overheat and could result in a fire.
- If you notice any unusual odours or smoke around the unit, disconnect it from the power outlet immediately and contact the service centre. Failure to do so may result in fire or electric shock.
- When the unit is not in use for long periods, or when moving it, disconnect the Smart Calendar from the power adaptor.

GENERAL SAFETY (CONT.)

- Be aware that dust may accumulate on the unit over time and cause it to generate heat and/or deteriorate insulation, which may result in an electrical fire.
- This product is not intended for use by people (including children) with reduced physical, sensory or mental capabilities. Children must be supervised by a person responsible for their safety.
- To maintain the product, do not use chemicals, cleaning agents or a wet cloth. Unplug the product from the power adaptor, then wipe it with a dry cloth to remove marks or dust.
- Contact our call centre for any repairs or servicing required for the product.

WARNING!

Toppling furniture and Smart Calendar can cause serious injury or death.

If a Smart Calendar is not positioned in a sufficiently stable location, it may pose a hazard if it falls. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

 
- Using cabinets or stands recommended by the manufacturer of the Smart Calendar.
- Only using furniture that can safely support the Smart Calendar.
- Ensuring the Smart Calendar does not overhang the edge of the supporting furniture.
- Not placing the Smart Calendar on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the Smart Calendar to a suitable support.
- Not placing cloth or other materials between the Smart Calendar and the supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the Smart Calendar or its controls.

GENERAL SAFETY (CONT.)

When positioning this product, ensure the location is:


- Not wet or damp, and well ventilated.
- Away from direct sunlight and heaters.
- Away from splashes and food.
- Protected from excessive dust and grease.
- Do not install this equipment in a confined space, such as a bookcase or similar unit.
- Do not install the Smart Calendar near heat sources such as radiators, stoves, or other audio-visual equipment that produces heat.
- Do not place containers of liquid near the product. If liquid enters the product, it may result in a short circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit. If metal objects enter the product, they may result in a short circuit, fire or electric shock.
- Do not use or store flammable or combustible materials near the unit, as this may result in fire or explosion. Do not place naked flames, such as lit candles, cigarettes or incense sticks, on top of the Smart Calendar.
- Install the unit at a reasonable distance from the wall to ensure sufficient ventilation.

PRODUCT OVERVIEW

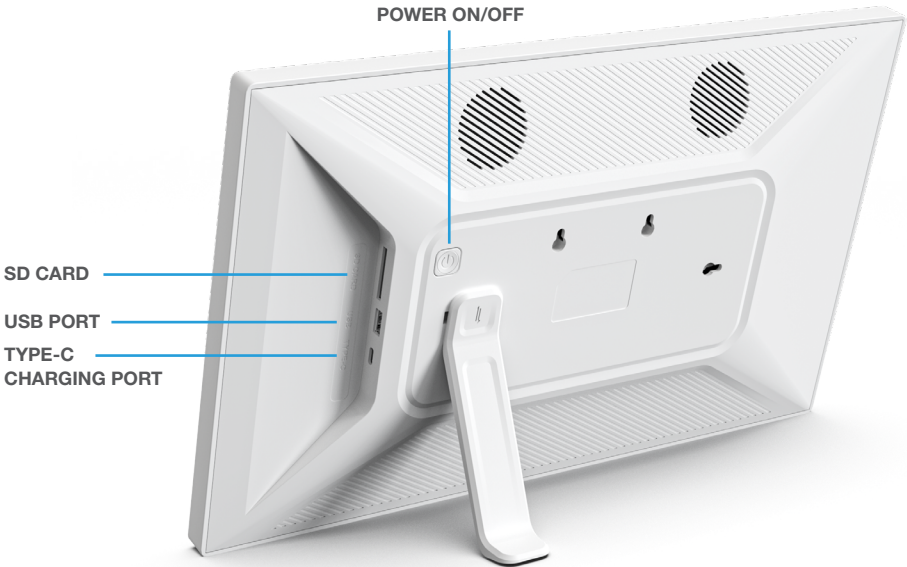

For first-time use, please make sure your calendar version is the latest by following the path below:
 Settings → More → Upgrade → Click “Check for new version”.
 If “No new version” is displayed, your device is already up to date.

 DASHBOARD

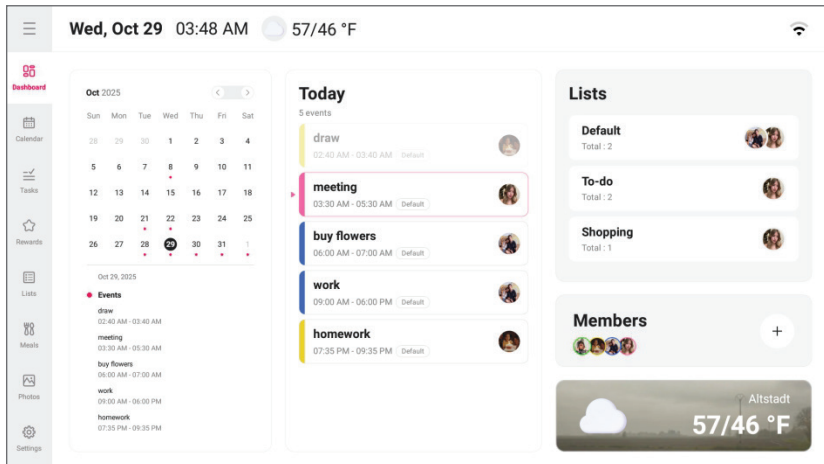

Note: As the software version may be periodically updated, the interface displayed may vary depending on the calendar device.


Quick Overview of Your Schedule:

Month View:	View the entire month's events at a glance. Switch between dates to check the specific plans for each day.
Today's Events:	Focus on today's agenda to help you stay on top of daily tasks. Completed events appear in grey, while pending events remain in their usual status. The current time period is highlighted for easy reference.
List View:	Displays ongoing categories and the number of events within each category, making it easier to manage and review your schedule.
Weather/ Temperature:	Automatically updates with the local time zone's weather and temperature. The temperature is displayed in both Celsius and Fahrenheit, with Fahrenheit set as the default.

HOW TO SYNC EXTERNAL CALENDAR TO YOUR ACCOUNT

Before sync external calendar, please refer to the Quick Start Card to ensure that your calendar device and the Whale Framely app have been successfully paired.

 1: Sync operations can only be completed through the app. See the following picture:

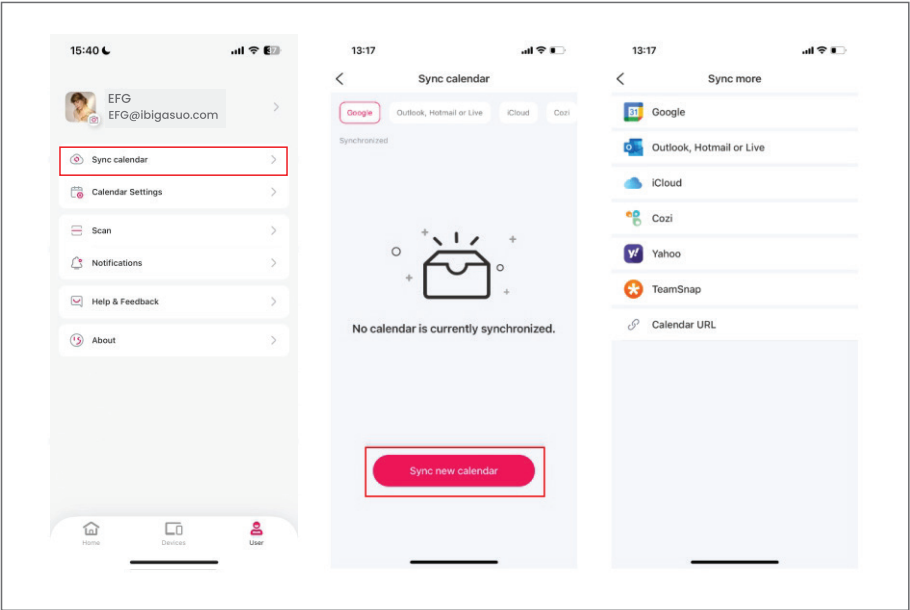

When you sync your external calendar (such as Google, iCloud, etc.) with Whale Framely, any changes made to the source calendar will be automatically updated in the Whale Framely calendar.

Note:

iCloud compatibility: iPhone 6s or later, with at least 16GB of storage, running iOS 13.0 or higher.

Video tutorials

Scan this QR code, you'll find a step tutorial on how to sync your Google Calendar, Apple Calendar (iCloud), Outlook Calendar, and compatible calendars on your account.



 
IMPORTANT NOTES FOR CALENDAR SYNC

1. Google Calendar is the only service that supports two-way sync (changes update in both directions). For other calendars (e.g. iCloud, Outlook, etc.), the sync is one-way (changes update only from the app to the calendar).

2. **iCloud Sync:** If you can't find the "Share Link" option as prompted by the app, make sure calendar permissions are enabled in your iCloud settings. Follow these steps:

- (1) Go to Settings > [Your Name] > iCloud.
- (2) Tap See All (or Show All), then select iCloud Calendar.
- (3) Turn Use on this iPhone on.

Note: Screenshots provided are for reference only. The exact layout and options may vary slightly depending on your operating system version, so some features might be located in different places.

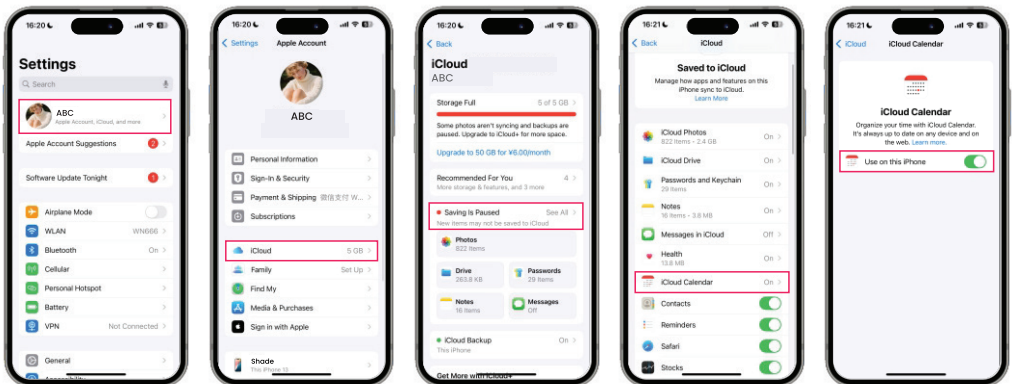


CREATE EVENT

‘You can create events directly through your calendar or the Whale Framely app. Your event will be automatically synced between your calendar and the app.

How to Create an Event on Your Digital Calendar ?

 
- 1: In the calendar section, Tap the “+” icon in the bottom right corner of the screen
- 2: Enter event details: On the next page, fill in the event title, time, and any other relevant details.
- 3: Save event: Once you’ve reviewed the information and confirmed it’s correct, tap the “Save” button. The event will be instantly added to your calendar.

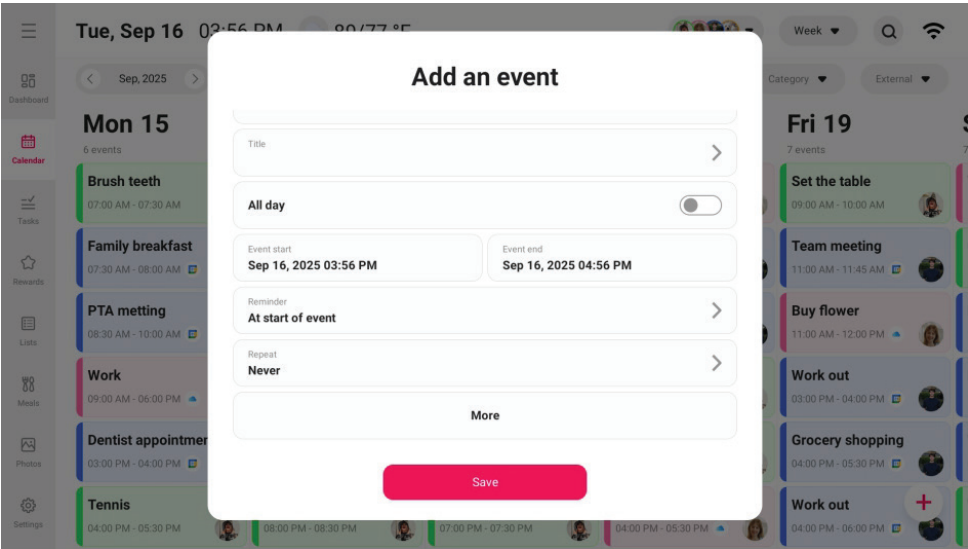


How to Create an Event on Your Digital Calendar ?

1. Launch the App: Open your “Whale Framely” App,you have two options to create an event:

 A. Go to the “Device” module and select the calendar you want to manage.

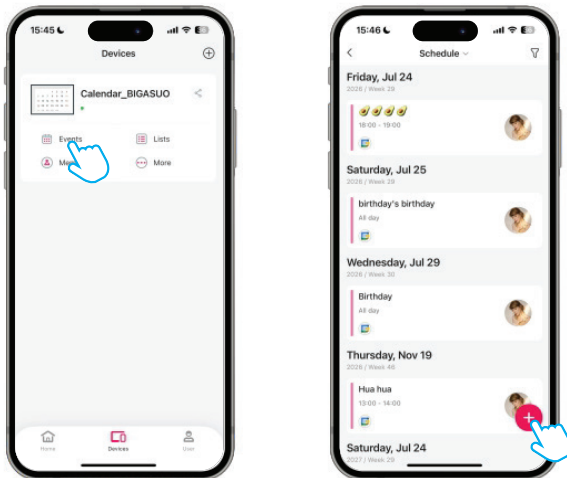

 B. Alternatively, choose “Events” in the “Home” module.

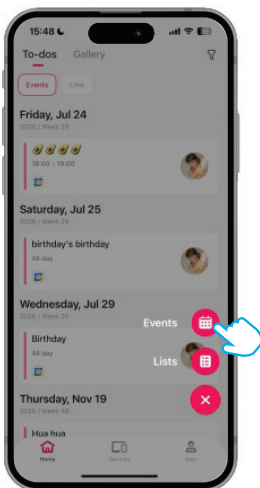


2. Add event(s): Tap the “⊕” icon at the bottom right corner of the screen.

3. Enter event details: On the next page, fill in the event title, time, and any other relevant details.

4. Save event: Once you’ve reviewed everything and confirmed it’s correct, tap the “Save” button. Your event will be instantly added to the calendar.

 CREATE TASKS

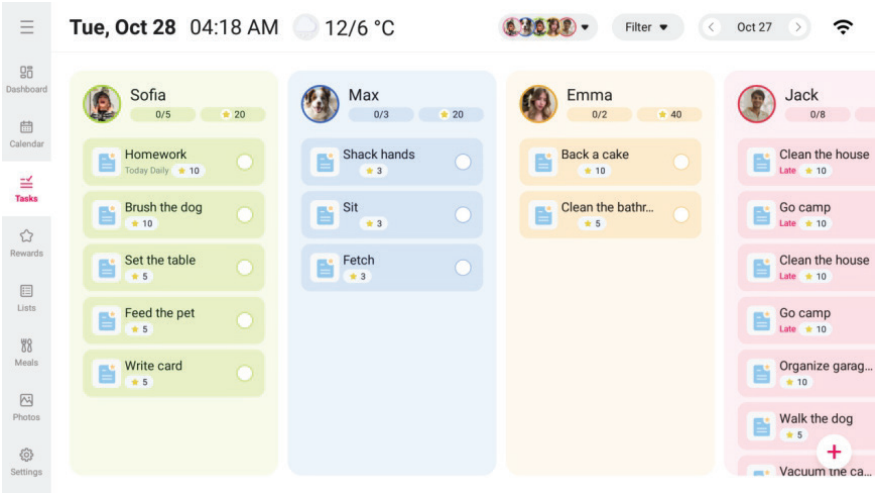


Tasks are a core feature of the Smart Calendar device, helping you stay on top of important activities in your daily life. Examples of tasks include chores like “Clean the garage” or “Mow the lawn.”

Create a task

You can create tasks on your device. Once created, the task will sync to the app.

 How to create a task on the device?

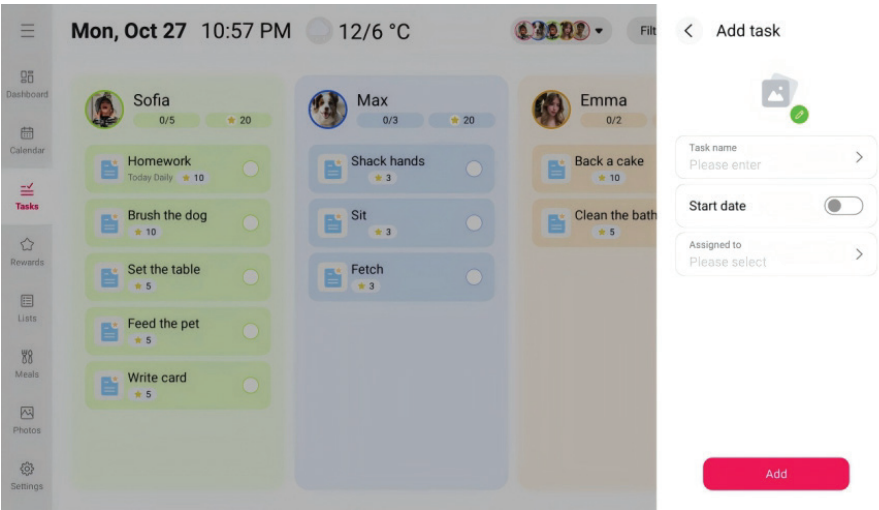


1. Open the task module on the device.
2. Tap the “⊕” icon in the bottom right corner of the screen.
3. On the next page, enter the task name, choose the date and time, and assign the task to the members.
4. After confirming all information is correct, click the “Add” button. The task will then sync and be displayed in the creator’s app.

View Task Details

In the Tasks module, tap on a task to view its details, including the task name, time, and stars that can be earned.

 Long press on a task to adjust its order, helping you optimize your task arrangement.

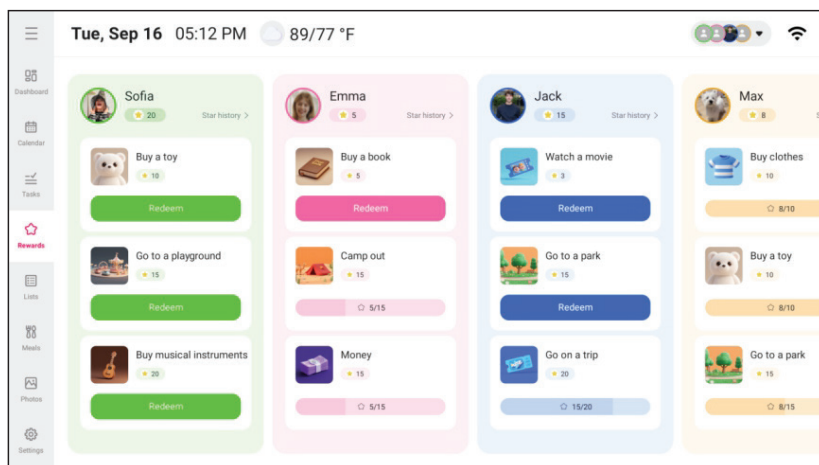

CREATE REWARDS

Rewards is a feature that helps motivate kids by making their progress toward goals visible and trackable.

View Reward Details

In the Rewards module, tap on a reward to view its details, including the reward name, time, and stars required for redemption. Long press on a reward to adjust its order.

Redeem a Reward on the Calendar

1. Tap Rewards in the Navigation bar on the Calendar.
2. Find your member.
3. Tap the Redeem button associated with the Reward you want.

 
 
Note: The Calendar device only supports viewing. Please create rewards through the Whale Framely app.

ADD LIST

You can create a list via your calendar or Whale Framely, and it will sync across both platforms. You can Edit Lists, Copy List, Delete List.

How to create an list on your digital calendar?

1. Open the list module on the device.
2. Tap the “+” icon in the bottom right corner of the screen.
3. On the next page, enter the list creator, title, and other details.
4. After reviewing the information, click “Save” to confirm. The list will sync and appear in your app.

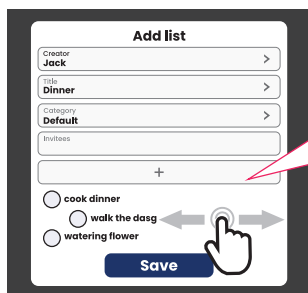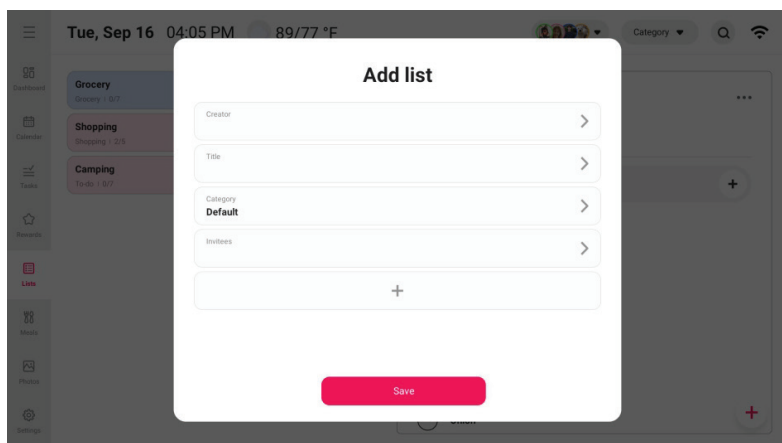

Tips: In the create interface, if you've accidentally created a list you don't need, simply swipe left or right to delete it.

 
Reminder:

By default, your calendar device will display lists with completed items. To hide them, go to Settings > Calendar, then enable the “Hide Completed Lists” option.


How to create an list on Whale Framely app?

1. Launch the App: Open your “Whale Framely” App. Here are the two ways to create:

A. find the lists you want to manage in the “Device” module.

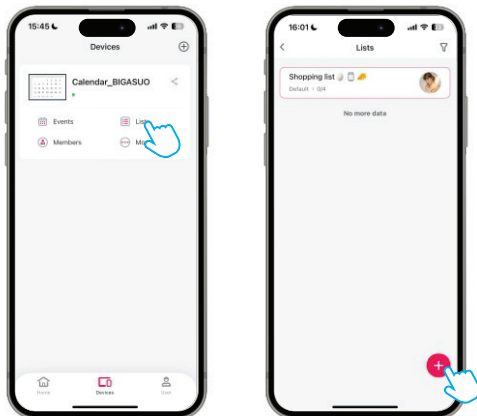

 B. Choose “Lists” in the “Home” module.

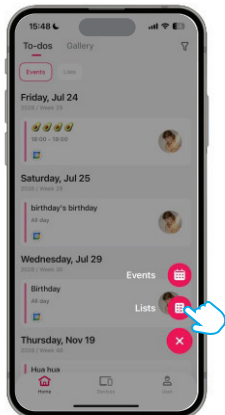


2. Add a New List: Tap the “+” icon in the bottom right corner of your screen to begin creating a new list.

3. Enter List Details: Type in the list title, choose a category label, and add your to-do tasks underneath.

4. Save the List: Once you’ve double-checked everything, tap “Save” and your list will automatically appear on the selected calendar.

MEALS

 
Meal planning is a powerful feature that allows you to schedule an entire week's meals in just a few minutes.

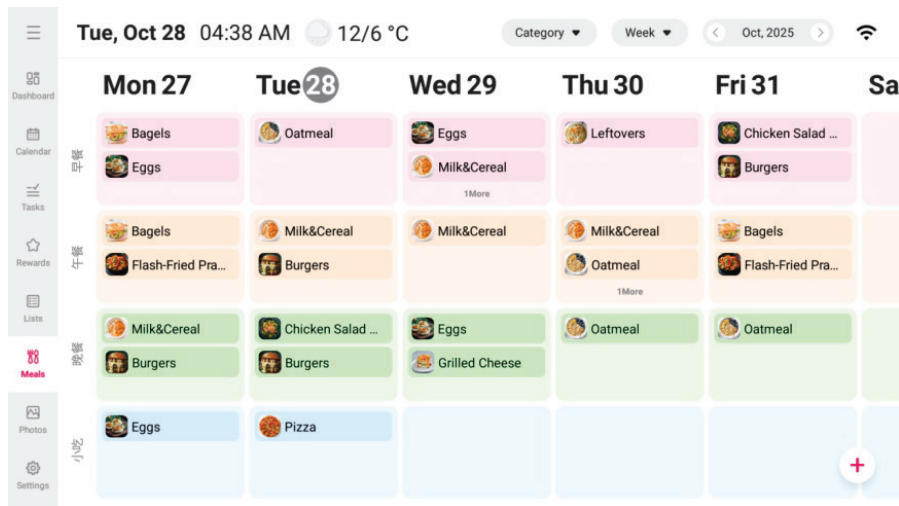

Create a meal plan

You can create meal plans on your device. Once created, the meal plan will sync to the app.

 How to create a meal plan on the device?

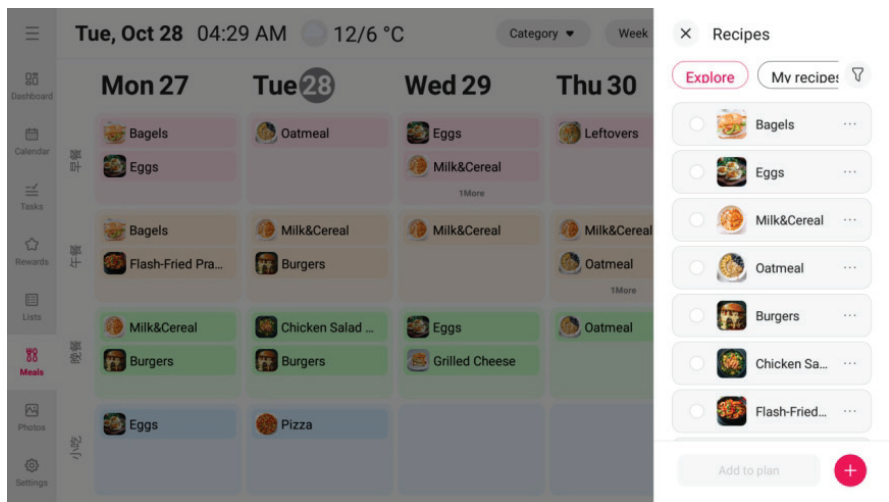

1. Select the Meals module.
2. Tap the tile for the mealtime you want to add a recipe to, or tap the⊕button.

 
- 3. Choose the recipes you want to add from the recipe box (multiple selections are supported).
- 4. After making your selections, tap Add to Plan.
- 5. Once added, you can simply tap the tile for that meal to view the full details.

View Meal Details

In the Meals module, tap on a dish to view its details, including the dish name, image, ingredients, and more.

PHOTOS

You can share photos and videos to the Calendar device via the Whale Framely App. On the Calendar device, you can manage your photos, create custom albums, set cover, play slideshows, and even use photos as a screensaver.

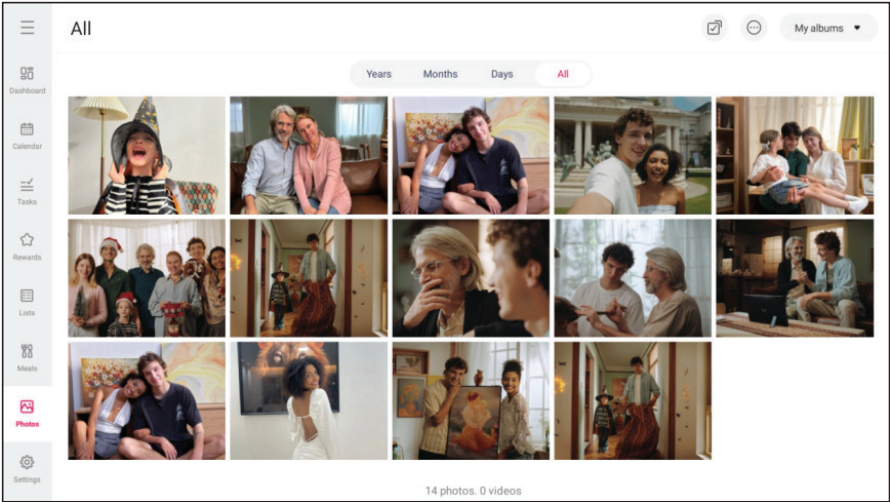

Flexible Browsing

Supports viewing in chronological or reverse chronological order. You can also filter and view only photos or videos.

Quick Search

Use the time tab to precisely locate and review images from specific periods.

 
Personalised Playback

Allows you to play the content of any album individually and customize the playback order.

Custom Albums

You can create exclusive albums based on themes, people, locations, etc.

How to send photos to your calendar via Whale Framely app:

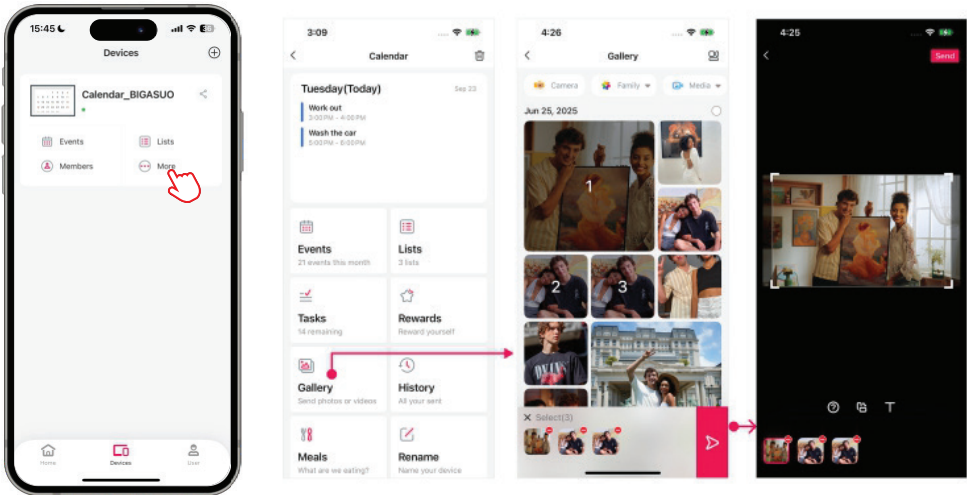

GENERAL SETTINGS

Dashboard

Calendar

Tasks

Rewards

Lists

Meals

Photos

Settings

General

Calendar

Photos

Members

Wi-Fi

More

General

Calendar display name

Calendar display name

Calendar

Time zone

Asia/Hong_Kong (GMT+8:00)

Language

English

Auto sync date & time

Set date

September 16, 2025

Set time

04:33 PM

24-hour format

Brightness


80%

Touch sounds

Make sure that the time zone on your phone matches the time zone of the calendar device at all times.

Sleep mode:	No reminders during sleep mode. If a scheduled event is set while the calendar is in sleep mode, no reminder will be triggered. However, once the calendar is activated, the reminder will be delivered immediately.
-------------	---

 
CALENDAR SETTINGS

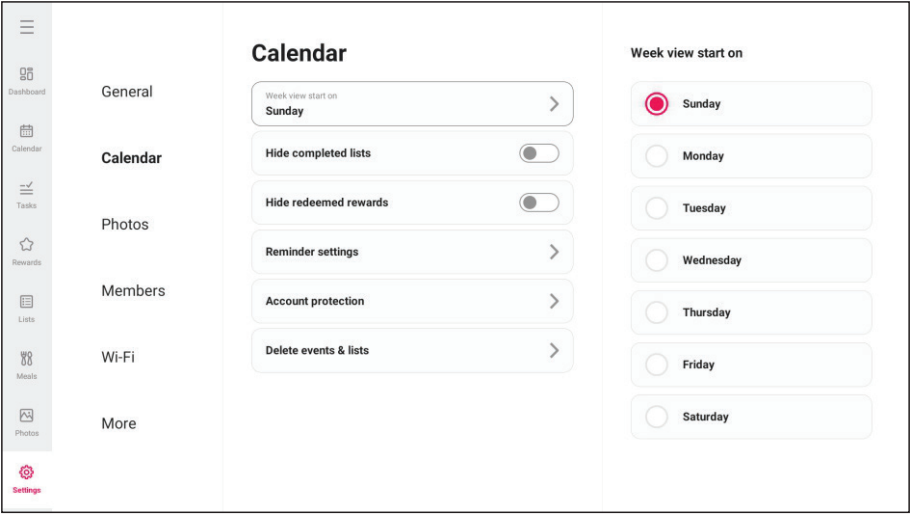

Hide completed lists	To hide the completed list, please enable this option. By default, this option is turned off.
Hide redeemed rewards	To hide the redeemed rewards, please enable this option. By default, this option is turned off.
Reminder setting	You can find all reminder-related settings on this interface.
Account Protection	Set a password to safeguard the linked account information on the calendar device and prevent accidental unbinding.
Delete events & lists	Supports bulk deletion of events and lists, saving you time efficiently.

ACCOUNT MANAGEMENT

 If you have any questions about how to use or set up your Digital Calendar, please contact us at help via email:

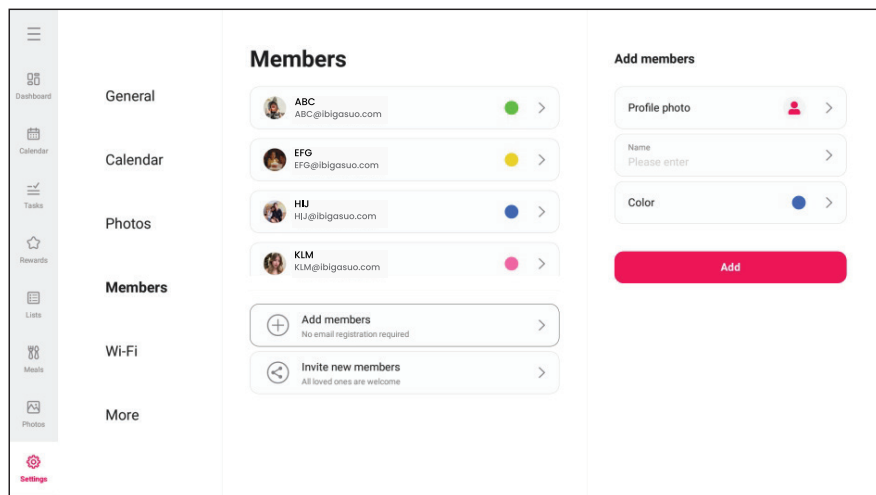

This list displays all connected members that are authorised to manage the events in your calendar.

Add members

You can create a new member for those who don't have an Whale Framely account.

1. Tap "Add Member"
2. Select a profile photo, enter the member name, select a color
3. Tap "Add"

Once completed, you can create events for them.

Invite new member

To invite a new member to manage the events together, simply tap the "Invite new members" button and share the generated pairing code or QR code in your preferred method.

 
Please note: The invitation code expires in 48 hours. If expired, click "Refresh" for a new one.

Unbind member

You can unbind a member. By clicking unbind, you will disconnect from this account, and all associated content will no longer be displayed. Please note that once the connection is removed, any events you've previously created on that calendar will no longer sync.

How to remove a connected calendar in “Whale Framely” App?

1. Tap the Devices modules, and you'll see a list of all connected devices.
2. Select the device you want to disconnect. Then, tap the icon in the top right corner to remove it;
3. Review the confirmation message, and tap Unbind to confirm.

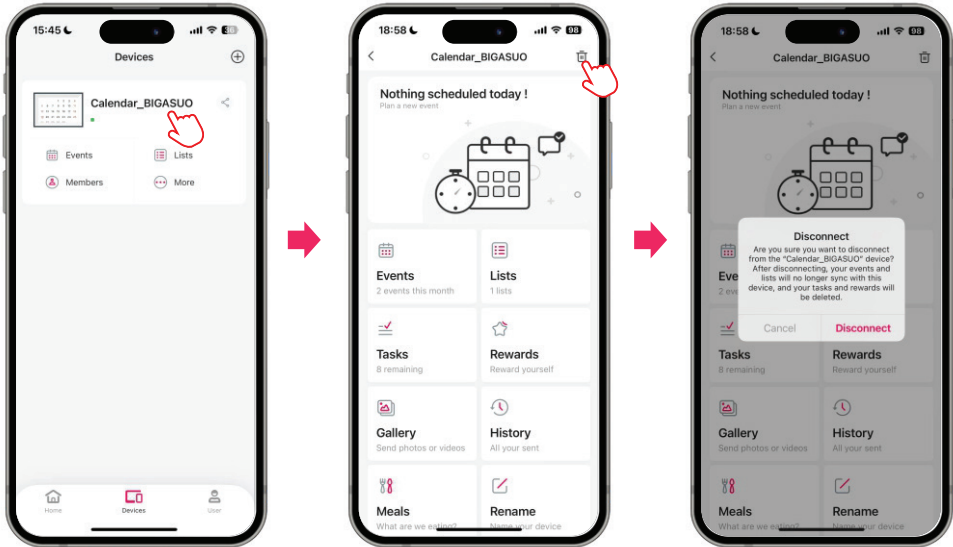

FAQ

If you have any questions about how to use or set up your Digital Calendar, please contact us at help via email:

Unable to invite new members	The invitation code has expired. Please note that both the QR code and pairing code are valid for 48 hours. If more than 48 hours have passed, please generate a new invitation code.
How to Hide Completed Lists	Go to Settings > Calendar, find the “Hide completed lists” option, and enable it.
Created a schedule but I didn’t receive a reminder	Please check if the schedule falls within the sleep mode period. If the schedule is set during sleep mode, reminders won’t be triggered. However, the reminder will activate once the calendar device is awakened.
Time/date wrong after restart	Check Wi-Fi in Settings to ensure a stable connection for proper sync.
Why can’t I edit iCloud-synced calendars on the calendar device?	iCloud does not support two-way sync, so edits cannot be made on the calendar device. Only Google Calendar supports two-way synchronization.

SPECIFICATIONS

Resolution	1920 x 1080	
Display Colours	16.7 Million	
Contrast ratio:	1000 : 1	
Brightness	220-250 cd/m2	
Refresh Rate	60Hz	
Power Source	5V $\equiv$ 3A	
Accessories	1 x 15.6" FHD Smart Calendar	1 x Power Adapter
	1 x Stand	1 x Instruction Manual
	2 x Wall-Mount Screws (PWA3 $\times$ 16 $\times$ 7 mm)	1 x Warranty Card

TELEFUNKEN

CUSTOMER HELPLINE:

info@ayonz.com

02 8279 8606

DISTRIBUTED BY:

Ayonz Pty Ltd